

# STEP-BY-STEP GUIDE

CemCote Brushed


Page 1 of 2



What do you need:

| 🔧 Tools & Consumables   | 📄 Products   | 📈 Difficulty |
|---|--|--------------|
| <ul style="list-style-type: none"><li>• Mechanical Mixer</li><li>• Large paintbrush</li></ul> | <ul style="list-style-type: none"><li>• CemBond</li><li>• CemCote</li><li>• Sealer of choice</li></ul> | ★ ★ ☆ ☆ ☆    |

The system:

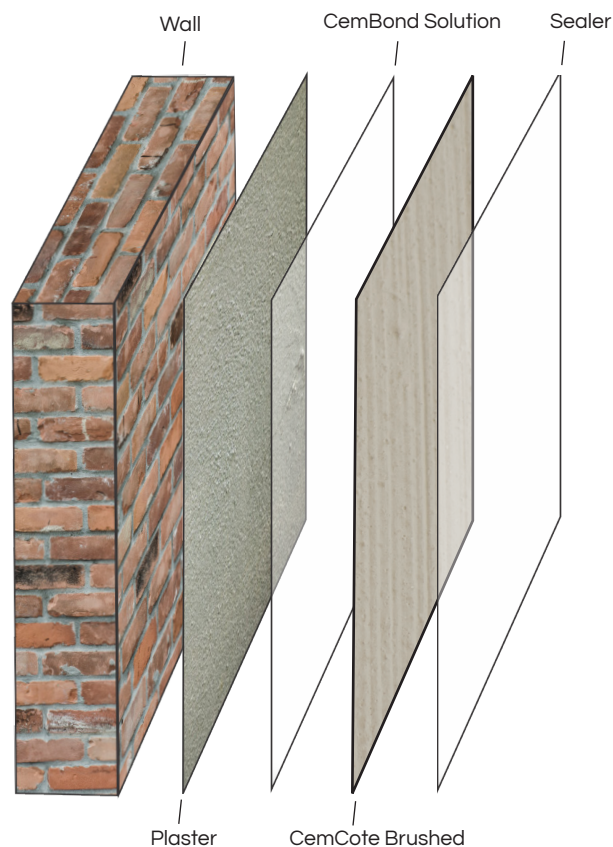

# STEP-BY-STEP GUIDE

## CemCote Brushed



1. All applicable surfaces to be structurally sound and free from grease, oil, wax, wall paper glue, dust or anything that might interfere with adhesion. Remove dust and loose defective paint if any. Important that the wall is also flat and smooth. New plaster surfaces should have less than 5% moisture content before CemCote application commences.



2. Prime wall prior to application with 2 coats of CemBond / water solution (diluted 1 part CemBond with 3 parts water).



3A. To 3 volumes CemCote stir in thoroughly 1 volume CemBond / water solution (diluted 1 part CemBond with 3 parts water) until a smooth paste is formed.



3B. Add 1 further volume of the CemBond / water solution, mix to a paint consistency and apply within 30 minutes.



4. Allow the first coat to dry for 24 hours. Mist spray first twice during the day following the day of application. Once the first coat has dried, apply the second coat mixed with clean water only. Use a large paintbrush (NOT a lime wash brush or roller). Mist spray the second coat twice during the day following the day of application and allow to cure for 24 hours. It is recommended for darker colours that the final coat be cured for at least 4 days.



5. Remove all dust and protect the wall until ready for sealing. The moisture in the wall must be less than 5% before sealing.

### Sealing instructions:

- Cementcrete manufacture a wide range of sealers designed for various purposes. Please contact your local representative for the best solution to meet your needs.

