

STEP-BY-STEP GUIDE




Click to view on  YouTube

CemCote Skimmed


Page 1 of 3



What do you need:

 Tools & Consumables	 Products	 Difficulty
<ul style="list-style-type: none">• Sponges• Mechanical Mixer• 120 Grit Abranet Sandpaper• 240 Grit Abranet Sandpaper• Steel Trowel• Roller / Brush	<ul style="list-style-type: none">• FlexBond (Interior Application) or CreteBond (Exterior Application)• CemCote• Sealer	★ ★ ★ ☆ ☆

The system:

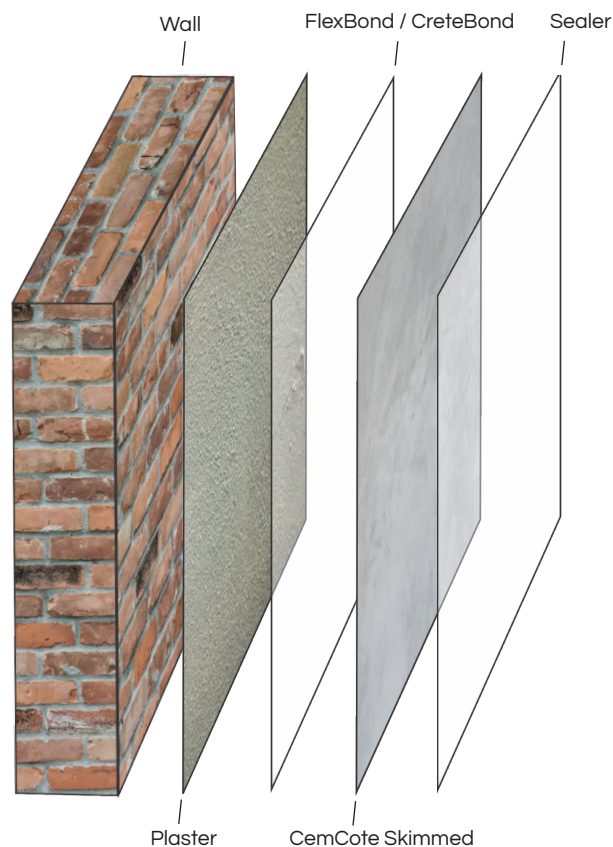

Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za

STEP-BY-STEP GUIDE

CemCote Skimmed

Click to view on  YouTube

Page 2 of 3



1. All applicable surfaces to be structurally sound and free from grease, oil, wax, wall paper glue, dust or anything that might interfere with adhesion. Remove dust and loose defective paint if any. Important that the wall is also flat and smooth.



2. Prime wall prior to application with two coats of Cemcrete's FlexBond/water solution (diluted 1 part FlexBond to 4 parts water).
NOTE: For exterior use, replace the FlexBond with CreteBond. Dilution ratios stay the same as for FlexBond.



3. To 1 volume FlexBond / water solution (diluted 1 part FlexBond to 4 parts water), slowly add 3 volumes of CemCote powder and mix mechanically slowly until a workable plaster consistency is achieved. Do not mix manually.
NOTE: For exterior use, replace the FlexBond with CreteBond. Dilution ratios stay the same as for FlexBond.



4A. Using a firm sponge rub the first layer thinly onto the surface, follow this method small sections of the wall at a time....



4B. ...then while still wet smooth the surface using a rounded pool trowel. Then sponge the next section and repeat the process. Each layer applied must not exceed a depth of 0.8mm even if high spots remain exposed.



5. When the first coat of CemCote is dry (but within 24 hours) , sand lightly by hand, in a circular motion, with 120 grit Abranet sandpaper.



Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za

STEP-BY-STEP GUIDE

Click to view on  YouTube

CemCote Skimmed


Page 3 of 3



Remove all dust until the surface is dust free. Clean the surface with a clean damp sponge.



Apply the second coat and any additional coats as needed (max 0.8mm per coat) , in the same manner as the first coat, until a smooth finish is achieved. First with a sponge and then...

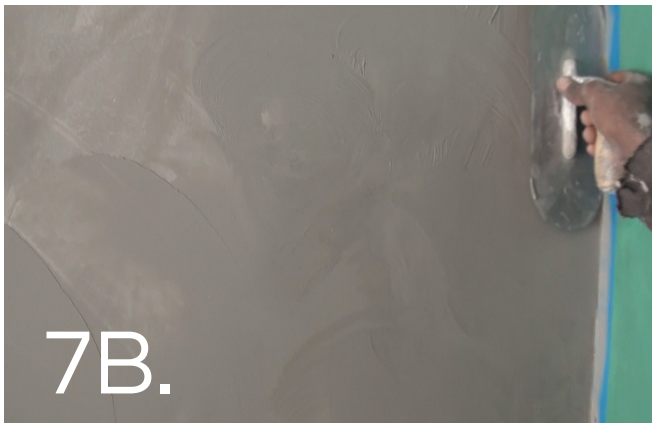

...with a trowel. (Repeat steps 4A and 4B).



Once the final coat of CemCote is dry (but within 24 hours after the application), sand lightly with 240 grit Abranet sandpaper in a circular motion, to not leave any sanding marks and ridges on the surface.



Remove all dust and protect the wall until ready for sealing. The moisture in the wall must be less than 5% before sealing.

Sealing instructions:

- Concrete manufacture a wide range of sealers designed for various purposes. Please contact your local representative for the best solution to meet your needs.