




STEP-BY-STEP GUIDE


Mould Rubber Latex



What do you need:

 Tools	 Products	 Difficulty
<ul style="list-style-type: none">• Gloves• Brush	<ul style="list-style-type: none">• Liquid Release Agent (such as diluted dish washing liquid)• Mould Rubber Latex• Thickener (if required)• CemForce	★ ★ ★ ☆ ☆

The system:

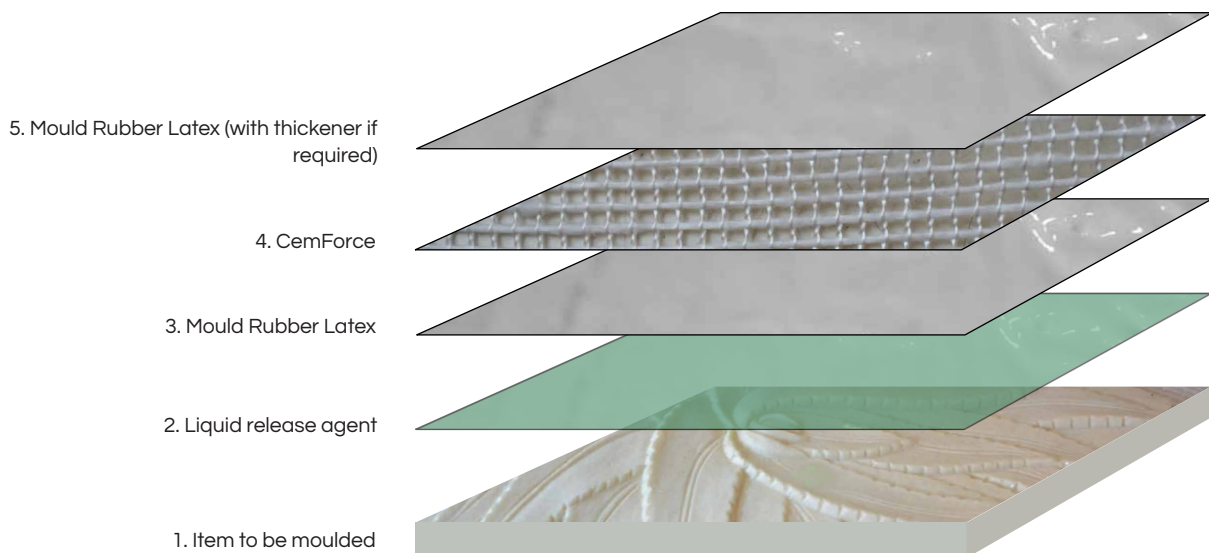

STEP-BY-STEP GUIDE

Making a mould of an existing object for recasting

Page 2 of 4



1. Use a brush to remove all dust particles.



2. Use a sparing amount of washing liquid to act as a release agent.



3. Spread the release agent thinly and wait for it to dry.



4. Thoroughly mix the Mould Rubber before use.



5. Use a brush to spread a thin coat of Mould Rubber over the panel so that it may pick up fine detail. Apply the Mould Rubber at thicknesses of around 3 - 4mm at a time.



6. Pop any bubbles you see. Wait for it to dry before applying a second layer. Use a fan to speed up the process if required.



Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za

STEP-BY-STEP GUIDE

Making a mould of an existing object for recasting

Page 3 of 4



7. Spread another thin (3 - 4mm) coat of Mould Rubber over the first layer and wait for it to dry (it will change colour as it dries.)



8. Pour some Mould Rubber into a tub. The amount is determined by the size of the panel / object.



9. Add enough thickening agent to make a paste.



10. Mix together. At this point you will know whether to add more thickening agent to the mix.



11. Spread the Mould Rubber mix over the panel until the entire object is covered, including the sides.



12. While still wet, place a layer of CemForce over the panel.

STEP-BY-STEP GUIDE

Making a mould of an existing object for recasting

Page 4 of 4



13. Use a trowel or your hands to embed the CemForce into the surface.



14. You may add additional Mould Rubber to ensure the CemForce is saturated.



15. Once dry, mix another batch of the Mould Rubber and thickener.



16. Spread evenly. Leave the finished mould to dry overnight. It should be completely set before you remove it from the panel.



17. Once set, slowly start at the corners and pull the mould away from the panel.



18. Once removed, you may cast your mould with various materials including Cemcrete's TexCrete.