

STEP-BY-STEP GUIDE




Click to view on  YouTube

CreteCote


Page 1 of 3



What do you need:

 Tools & Consumables	 Products	 Difficulty
<ul style="list-style-type: none">• Sponges• Mechanical Mixer• 120 Grit Abranet Sandpaper• 240 Grit Abranet Sandpaper• Broom / Vacuum• Steel Trowel• Roller / Brush• Mist Sprayer	<ul style="list-style-type: none">• PrimerCote Or Suitable Self-Levelling Screed (Optional)• Concrete Primer• CreteCote (Twin-pack)• Sealer	★ ★ ★ ☆ ☆

The system:

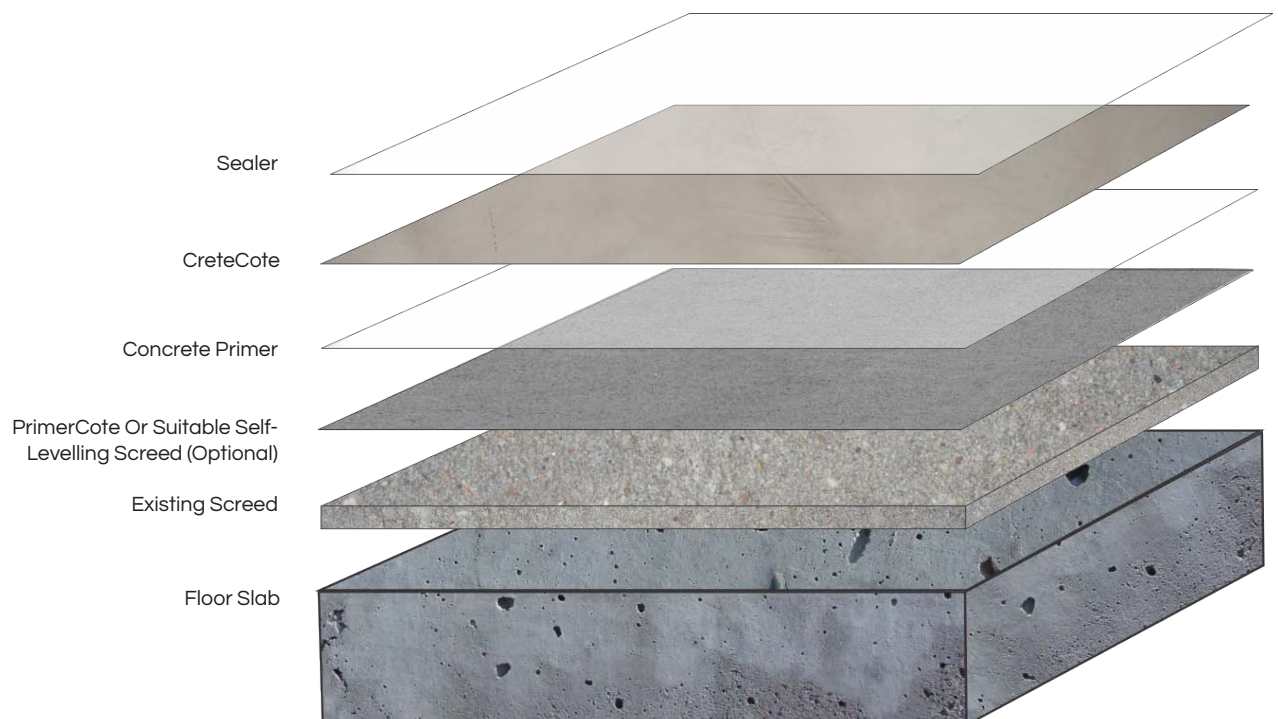

Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za

STEP-BY-STEP GUIDE

CreteCote

Click to view on  YouTube

Page 2 of 3



1. Prepare the concrete base / screed as required. Refer to product datasheet for correct procedure. Cemcrete's PrimerCote or a self-leveller can be used if required. Sand high / rough spots.



2. Apply Cemcrete's Concrete Primer with a sponge.



3. Mechanically mix the polymer solution and CreteCote powder.



4A. Sponge on to achieve best adhesion and...



4B. ...immediately trowel, working in small sections (max 0.8mm per coat), until a smooth finish is achieved.



5. When the first coat of CreteCote is dry (but within 24 hours), sand lightly by hand, in a circular motion, with 120 grit Abranet sandpaper.



Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za

STEP-BY-STEP GUIDE

CreteCote

Click to view on  YouTube

Page 3 of 3



Remove all dust until the surface is dust free. Clean the surface with a clean damp sponge.



Apply the second coat and any additional coats as needed (max 0.8mm per coat) , in the same manner as the first coat, until a smooth finish is achieved. First with a sponge and then...



...with a trowel. (Repeat steps 4A and 4B).



Once the final coat of CreteCote is dry (but within 24 hours after the application), sand lightly with 240 grit Abranet sandpaper in a circular motion, to not leave any sanding marks and ridges on the surface.



Remove all dust and protect the floor until ready for sealing. The moisture in the floor must be less than 5% before sealing.

Curing instructions:

- The completed work should be allowed to air cure for 24 hours after application, prime CreteCote with Cemcrete's Sealer Primer.

Sealing instructions:

- Cemcrete manufacture a wide range of sealers designed for various purposes. Please contact your local representative for the best solution to meet your needs.



Manufacturers of Distinctive Decorative Coatings
0860 CEMCRETE | info@cemcrete.co.za | www.cemcrete.co.za